


## HOME RUN METHOD

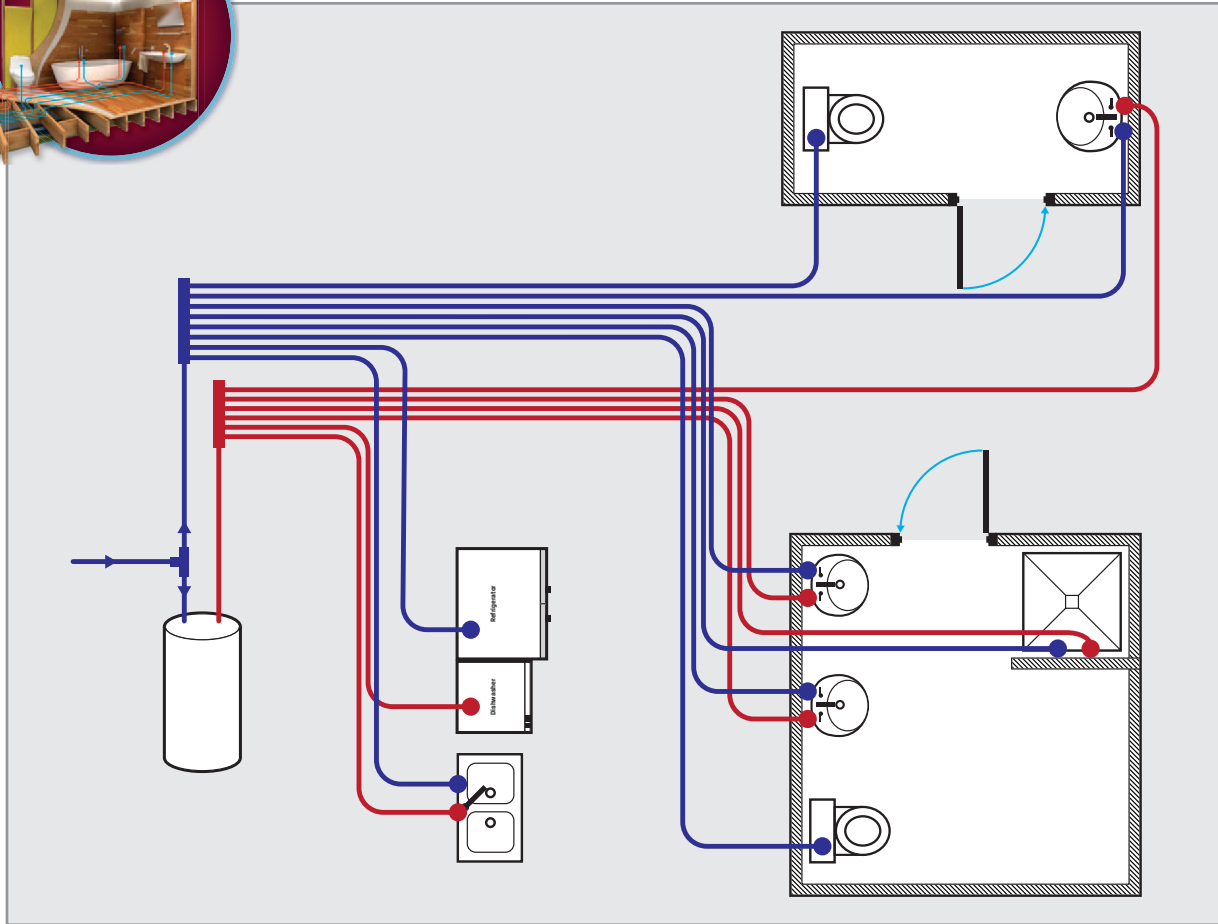

This type of install incorporates a dedicated line or a set of lines to every fixture from your water heater.



**Pros:** Less fittings are used. No need to carry many different fittings to the job. Pressures remain the same at all times. Large main lines are not needed to run throughout the building. If one line is ever compromised it is easy to isolate rather than shutting the whole system down.

**Cons:** More tubing is used than in any other application. A fair amount of space is needed for the manifold.